




Charging Station

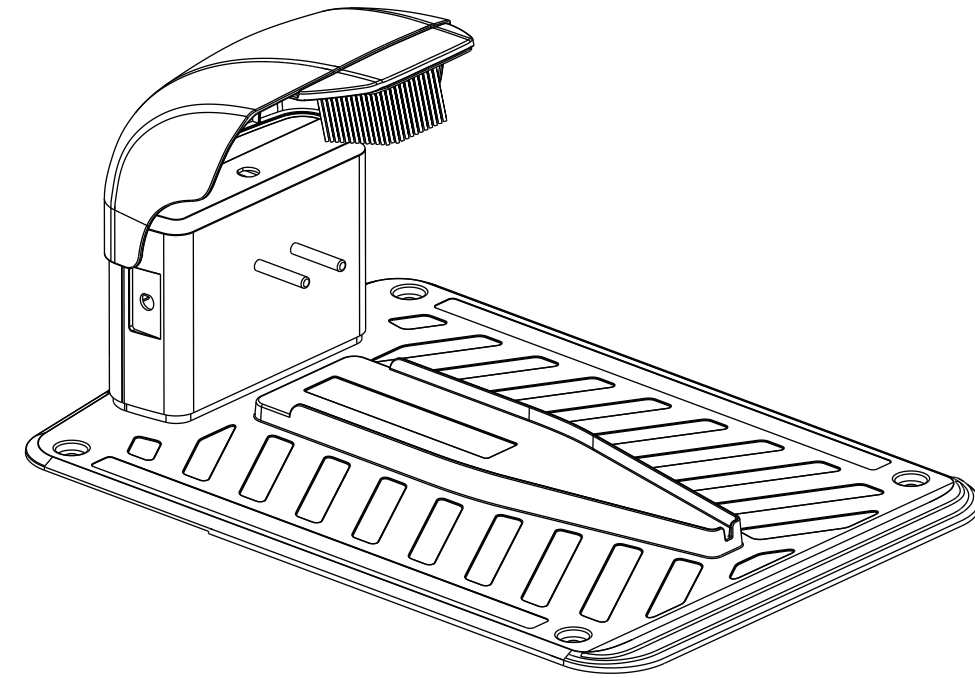


Charging Station Kit

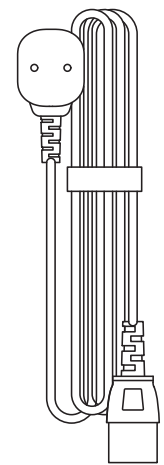

Power Supply Cable




Extension Cable

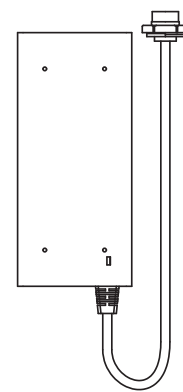


Power Adapter

Universal Tool Kit

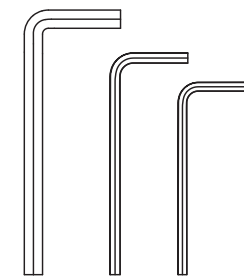


Hex Wrench
(Large/Medium/Small)




Screwdriver



Spare Blade*6




Skid Plate
Screw*6




Plastic
Screw*4


Mower Accessory Kit

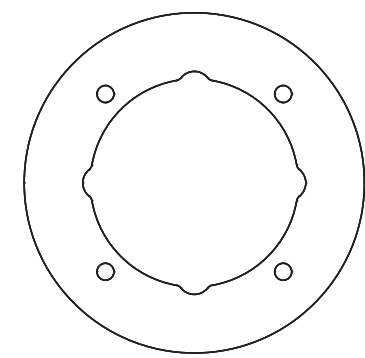


Lawn Mower Engine
Sealed Grommet

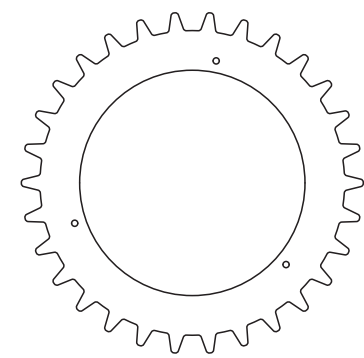


Ground Gripper*2




M4x10
Screw*6

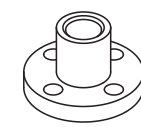

T8 Lead Screw
Nut Mount*2



Blade Disc
Adapter Bolts*4

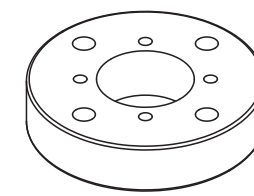


Blade Disc Adapter


Blade Disc Assembly Parts

To install the charging station


1. Choose a flat, level area to place the charging station.
 - Leave a free level area with a radius of at least 2m in front of the charging station free of hills, inclines, depressions, holes or obstacles.
 - Make sure the grass under the charging station plate is not taller than 5cm (about 2 inches).

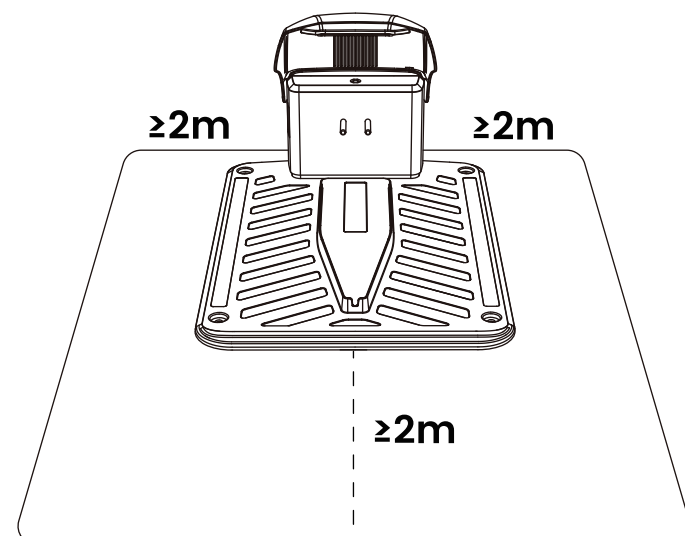

2. Fix the charging station and garage to the ground with screws.

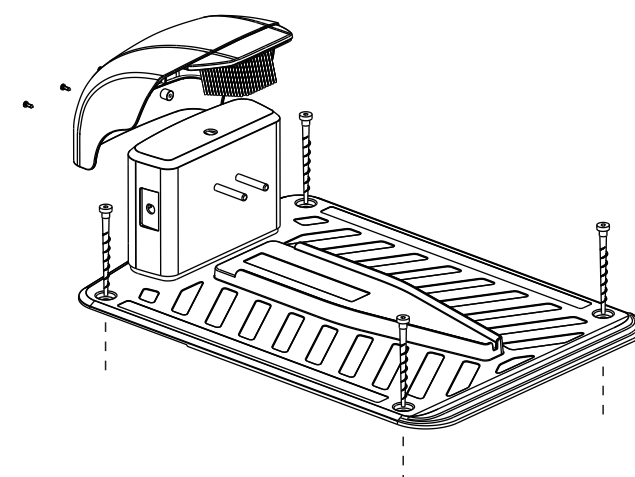

3. Connect the power adapter, 10m extension cable, and power supply cable, and plug into a power outlet.

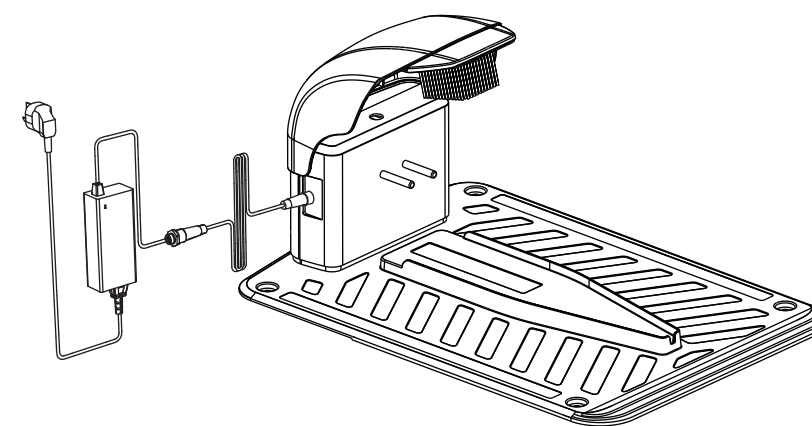

⚠ This guide is only for reference. The actual products and features may vary.

FJDynamics

Quick Start Guide

FL3000



Learn More



FJD Landscaping

Connect App & Pair the Mower


1.Download the FJD Landscaping app.




2.Power on the mower by pressing the button at the bottom of it.




3. Turn on the app and follow the instructions to pair the mower with your phone.

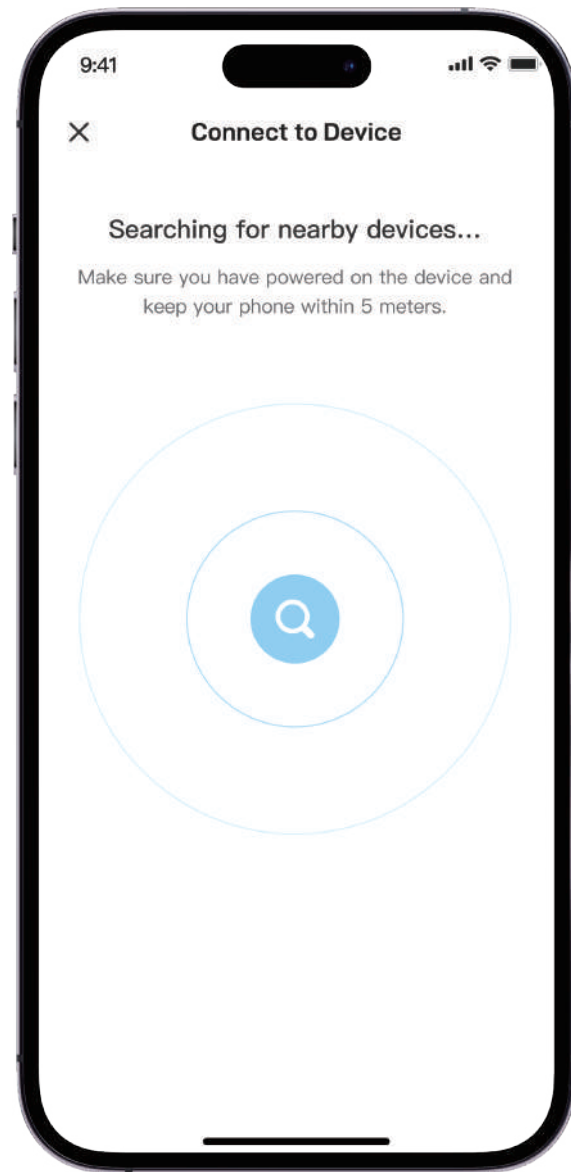

5.Use the virtual joysticks on your phone to drive the mower along the boundaries of the work zones and no-go zones.

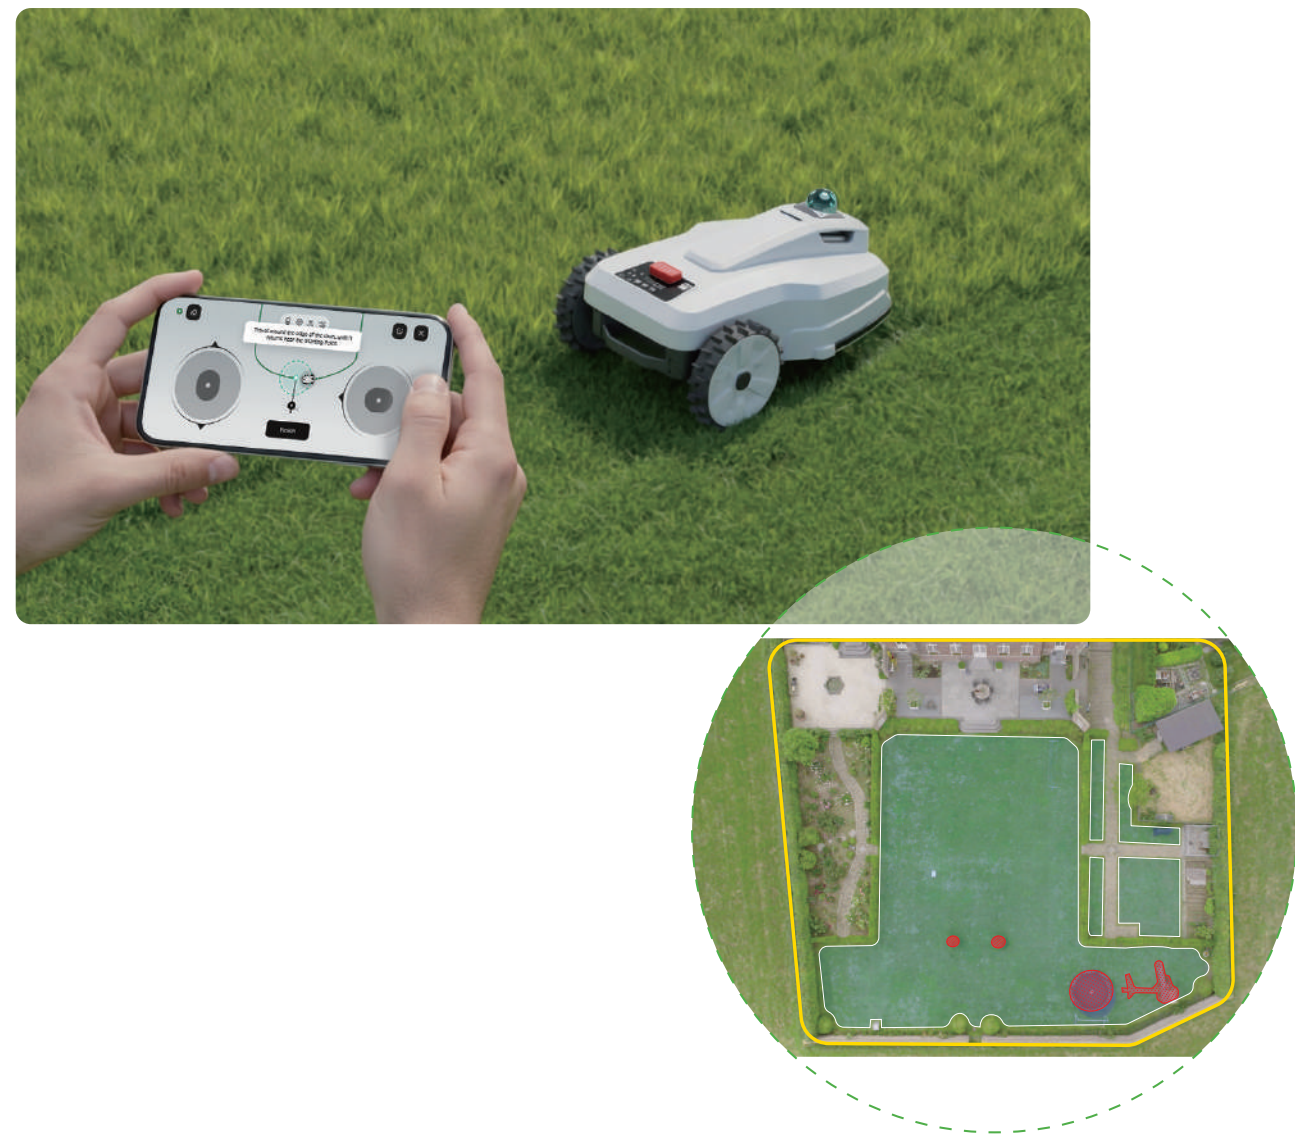

4.Go to "View in Maps" and start mapping your lawn.

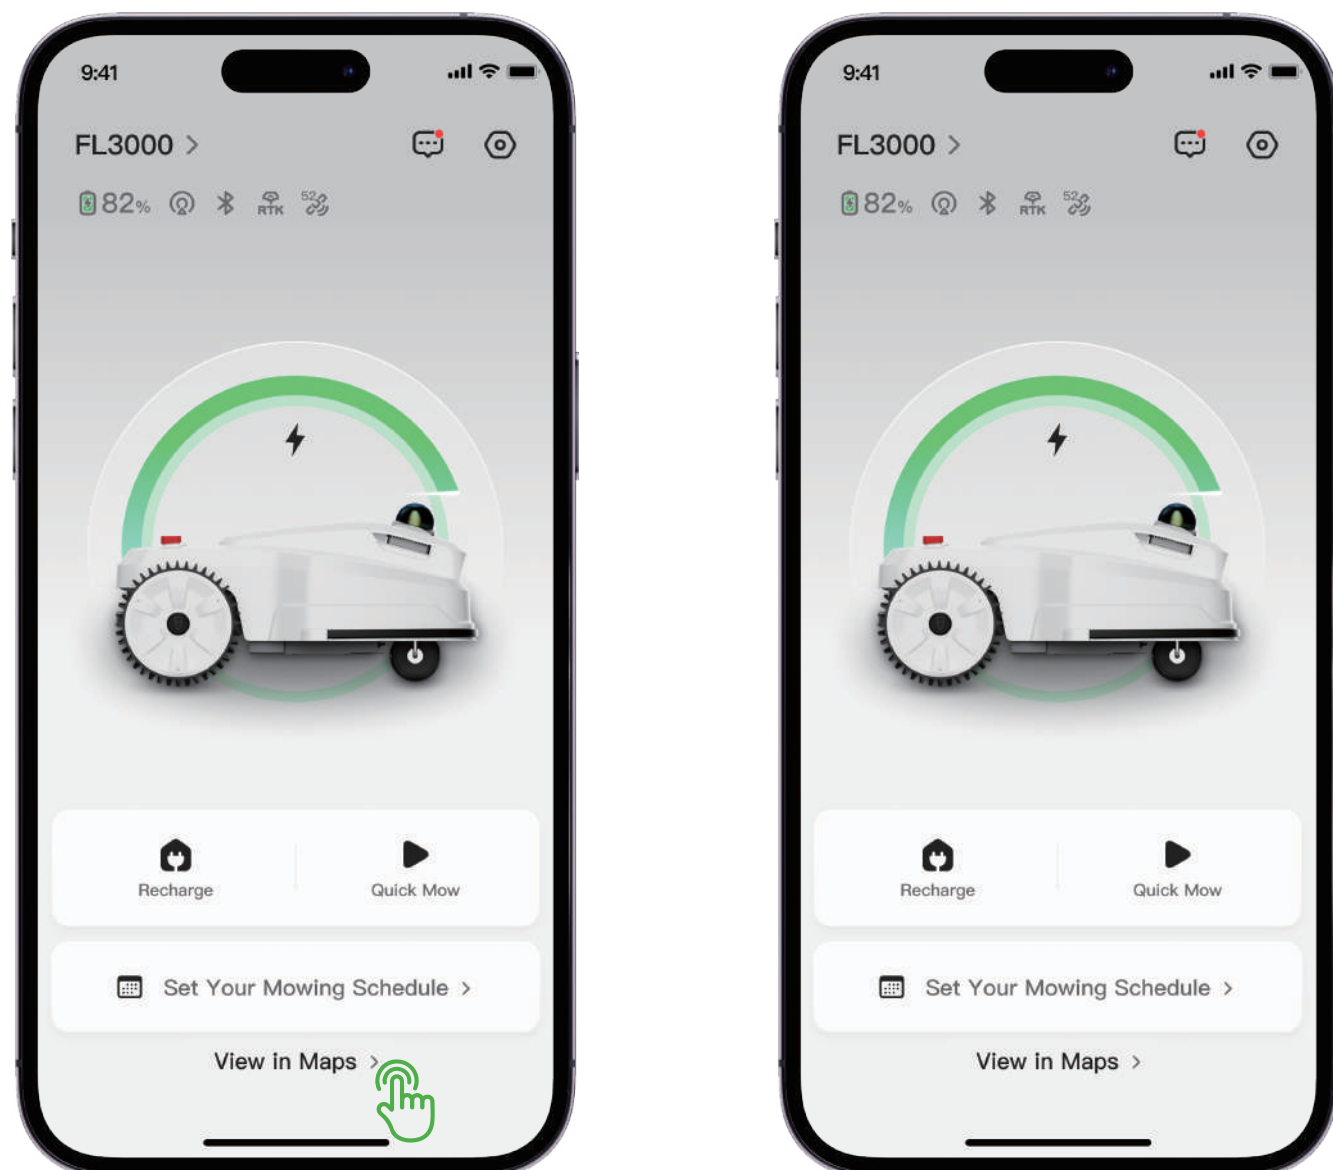

6.Start a quick mow mission or schedule a future mission.

